


NOTES:

① IDENTIFY LOCATION OF B-BOX. DEPLOY AND MAINTAIN ALL NECESSARY TRAFFIC CONTROL. EXCAVATE AND EXPOSE THE CURB STOP.

IF CURB STOP IS IN GOOD CONDITION, TURN TO THE OFF POSITION AND REMOVE SERVICE LINE FROM CUSTOMER SIDE OF CURB BOX. INSERT BRASS DISC AND SCREW ON COMPRESSION NUT.

IF CURB STOP IS LEAKING, REMOVE EXISTING CURB STOP AND INSTALL NEW, CITY FURNISHED CURB STOP.

AFTER ALL WORK IS INSPECTED, BACKFILL AND RESTORE THE AREA PER APPROPRIATE CITY STANDARD SPECIFICATION.

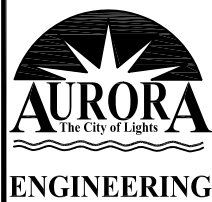

REVISIONS	
DATE:	BY:
04-18	DGoewey

WATER SERVICE ABAN - Type B		
SCALE:	CHECKED:	DRAWING NUMBER:
NOT TO SCALE	JB	EXHIBIT III-G-2
DATE:	DRAWN:	
04/17	DG	