

**NOTES:**

LOCATE SERVICE AT THE R.O.W. (PROPERTY LINE)

DEPLOY AND MAINTAIN ALL NECESSARY TRAFFIC CONTROL.


EXCAVATE AND EXPOSE SERVICE AT THE R.O.W.

CUT / REMOVE EXIST. SERVICE; PLUG END OF ABANDONED SERVICE WITH NON-SHRINK GROUT.

INSTALL NEW SANITARY CLEANOUT AND TEE OF THE APPROPRIATE SIZE; PLUG SERVICE SIDE OF TEE; INSTALL RISER WITH CAP AND PLUG. (SEE SECTION A-A).

AFTER ALL WORK IS INSPECTED, BACKFILL AND RESTORE THE AREA PER APPROPRIATE CITY STANDARD SPECIFICATIONS.

\* IF EXISTING SERVICE WILL NOT FIT ON NEW TEE, USE A SMALL SECTION OF SDR-26 IN THE TEE AND CONNECT TO THE EXIST. SERVICE WITH A NON-SHEAR MISSION COUPLING.

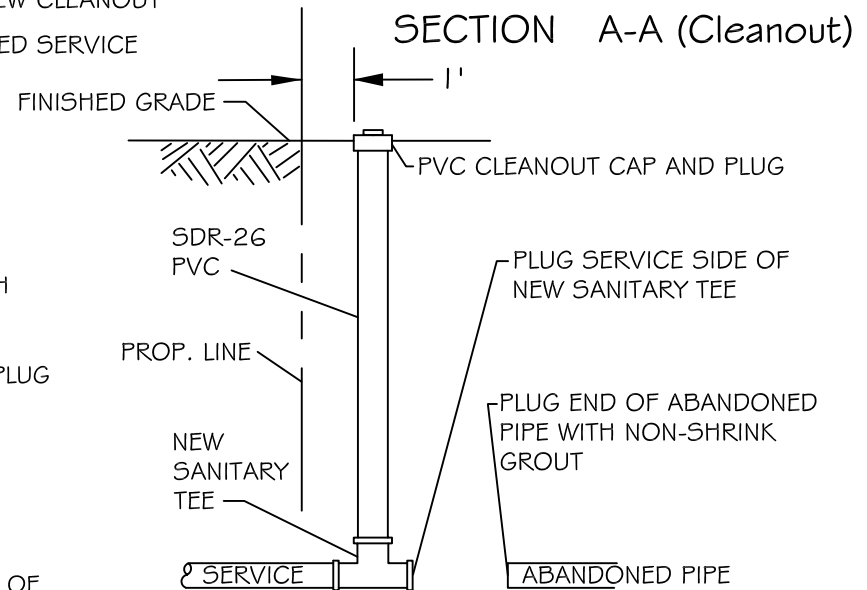

REVISIONS	
DATE:	BY:
03-10-20	DGoewey

SAN SEWER ABAN (For Immediate Re-Development) - Type B		
SCALE:	CHECKED:	DRAWING NUMBER:
NOT TO SCALE	JB	EXHIBIT III-G-5
DATE:	DRAWN:	
4/17	DG	